



120 V AC and 9V Battery Backup


(model KN-COSM-IB only)

COMBINATION SMOKE & CARBON MONOXIDE ALARM

With Voice Message System, Hush,
and Peak Level Memory

User's Guide

*For questions concerning your
Smoke and Carbon Monoxide Alarm,
please call our Consumer Hotline at
1-800-880-6788.*

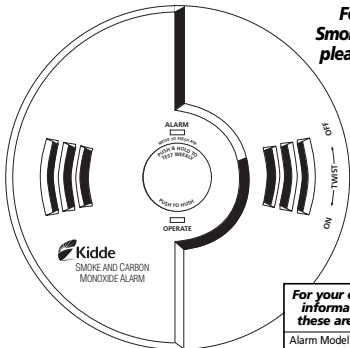

Kidde
SMOKE AND CARBON
MONOXIDE ALARM



Model
KN-COSM-I
and KN-COSM-IB

For your convenience, write down the following information. If you call our consumer hotline, these are the first questions you will be asked:

Alarm Model Number (located on back of alarm):

Date of Manufacture (located on the back of the alarm):

Date of Purchase:

Where Purchased:

Alarm Assembly Number (located on the back of the alarm)

Table of Contents


Introduction	Page 1
Product View	Pages 2-3
Features	Pages 4-7
Installation Instructions	
Step 1 Installation Instructions:	
A. Recommended Installation Locations	Pages 8-10
B. Where Not to Install	Page 11-12
Step 2 Wiring Instructions	Page 12-13
Step 3 Mounting Instructions	Page 14-15
Step 4 Testing the Alarm	Page 16
Operating Instructions	
Interconnect Feature	Page 17
HUSH Control Feature	Page 18
Reset Feature	Page 18
Peak Level Memory	Page 19
LED Indicator Operation	Page 19
Tamper Resist Feature	Page 20
What to do if the Alarm Sounds	
Smoke Alarm	Pages 21-22
Carbon Monoxide Alarm	Pages 22-23
Alarm Removal/Battery Replacement	Pages 23-25
General Alarm Maintenance	Pages 26
Carbon Monoxide Safety Information	
General CO Information	Page 27
Possible Sources	Page 27
CO Safety Tips	Page 28
Symptoms of CO Poisoning	Page 28
Fire Safety Information	
Escape Plan	Page 29-30
Fire Prevention	Page 30
Industry Safety Standards	
National Fire Protection Association	Page 30
California State Fire Marshall	Page 31
Consumer Product Safety Commission	Page 31
NRC	Page 32
Limited Warranty and Service Information	Pages 32-34
Product Registration	Page 34

Introduction

Thank you for purchasing the Kidde Combination Smoke and Carbon Monoxide Alarm model # KN-COSMH or # KN-COSMHB. This alarm is suitable as a Single Station and/or Multiple Station (24 devices) alarm. This alarm has a five-year limited warranty. Please take a few minutes to thoroughly read this user's guide, and save for future reference. Teach children how to respond to the alarms, and that they should never play with the unit. Your Kidde Smoke/CO Alarm was designed to detect both smoke and carbon monoxide from any source of combustion in a residential environment. It is not designed for use in a recreational vehicle (RV) or boat. If you have any questions about the operation or installation of your alarm, please call our toll free Consumer Hotline at 1-800-880-6788. The guide on Page 29 will help you determine the correct location of safety products that will help keep your home a safer place.


Product View

FRONT

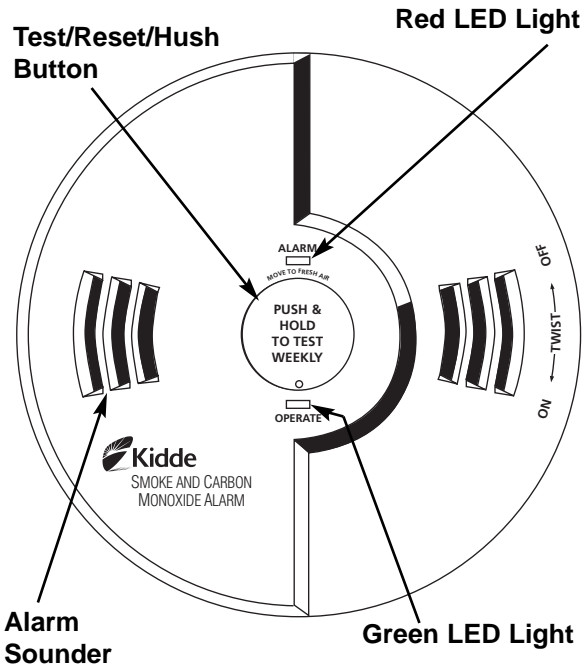

Product View

BACK

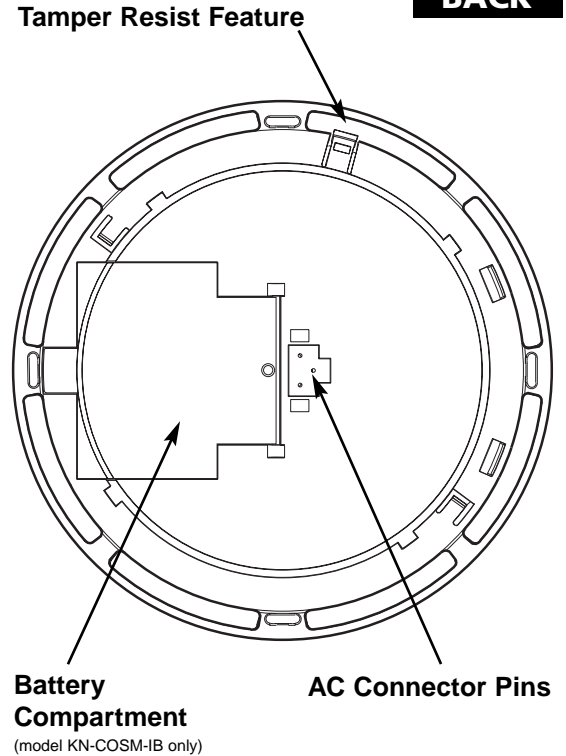

Features

- Loud 85 decibel alarm.
- Permanent independent smoke and carbon monoxide sensors.
- **Smoke alarm takes precedence** when **both** fire and carbon monoxide are present.
- Powered by 120V AC (60 Hz, 25 mA max) wire-in connector. Model KN-COSM-IB is also equipped with a 9V battery backup.
- Model KN-COSM-IB is equipped with Battery Pull Tab that allows for easy battery connection. Simply pull tab out, and battery is connected!
- Interconnectable to other Kidde/Nighthawk brand smoke and CO alarms (See Page 16 for details).
- Alarm/Voice message warning system that alerts you of the following conditions in the manner described below, thus eliminating any confusion over which alarm is sounding:

FIRE: The alarm/voice pattern is three long alarm beeps followed by the verbal warning message “FIRE! FIRE!” This pattern is repeated until the smoke is eliminated. The red LED light will flash while in alarm/voice mode.

CARBON MONOXIDE: The alarm/voice pattern is four short alarm beeps followed by the verbal warning message “WARNING! CARBON MONOXIDE!”. This continues until the unit is reset or the CO eliminated. While powered by battery only, after four minutes the alarm/voice pattern will sound **once every minute**. The red Light Emitting Diode (LED) light will flash while in alarm/voice mode.

LOW BATTERY(model KN-COSM-IB only): When the batteries are low and need replacing the red LED light will flash and the unit will “chirp” one time, followed by the warning message “LOW BATTERY.” This cycle will occur once every minute and will continue for at least seven days.

Features

- Voice Message System that alerts user to the following conditions:
 - System announces "HUSH MODE ACTIVATED" when the unit is first put into HUSH Mode.
 - System announces "HUSH MODE CANCELLED" when unit resumes normal operation after Hush Mode has been cancelled.
 - System announces "CARBON MONOXIDE PREVIOUSLY DETECTED" when the unit has detected CO concentrations of 100 ppm or higher.
 - System announces "PUSH TEST BUTTON" when the unit is powered up, reminding user to activate the Test Button.
- One “chirp” every 30 seconds is an indication that the alarm is malfunctioning. If this occurs call the Consumer Hotline at 1-800-880-6788.
- Test/Reset button performs the following functions:
 - Tests the units electronics and verifies proper unit operation
 - Resets the unit during CO alarm
 - Activates HUSH Feature
 - Activates Peak Level Memory Feature
- HUSH Control Feature that silences the unit during nuisance alarm situations. (See Page 17)
- Peak Level Memory Feature which alerts user when the unit has detected CO concentrations of 100 ppm or greater. (See Page 18)
- Alarm Memory Feature that gives visual indication when an alarm has sensed a hazardous condition.
- Green and red LED lights that indicate normal operation and alarm status (see Page 18 for details).
- Tamper Resist Feature that deters children and others from removing the alarm. (See Page 19)
- Model KN-COSM-IB is equipped with a battery reminder flag that prohibits installation when battery is not present.

Smoke Alarm Features

- Seven (7) years after initial power up, this unit will “chirp” every 30 seconds to indicate that it is time to replace the alarm.

Smoke Alarm

The smoke alarm monitors the air for products of combustion that are produced when something is burning or smoldering. When smoke particles in the smoke sensor reach a specified concentration, the alarm/voice message warning system will sound, and be accompanied by the flashing red LED light. The smoke alarm takes precedence when both smoke and carbon monoxide are present.

WARNING: PLEASE READ CAREFULLY AND THOROUGHLY

NFPA 72 states: Life safety from fire in residential occupancies is based primarily on early notification to occupants of the need to escape, followed by the appropriate egress actions by those occupants. Fire warning systems for dwelling units are capable of protecting about half of the occupants in potentially fatal fires. Victims are often intimate with the fire, too old or young, or physically or mentally impaired such that they cannot escape even when warned early enough that escape should be possible. For these people, other strategies such as protection-in-place or assisted escape or rescue are necessary.

- Smoke alarms are devices that can provide early warning of possible fires at a reasonable cost, however, alarms have sensing limitations. Ionization type alarms offer a broad range of fire sensing capabilities but are better at detecting fast flaming fires than slow smoldering fires. Photoelectric alarms sense smoldering fires better than flaming fires. Home fires develop in different ways and are often unpredictable. Neither type of alarm (photoelectric or ionization) is always best, and a given alarm may not always provide warning of a fire.
- A battery powered alarm must have a battery of the specified type, in good condition and installed properly.
- A.C. powered alarms (without battery backup) will not operate if the A.C. power has been cut off, such as by an electrical fire or an open fuse.

- Smoke alarms must be tested regularly to make sure the batteries and the alarm circuits are in good operating condition.
- Smoke alarms cannot provide an alarm if smoke does not reach the alarm. Therefore, smoke alarms may not sense fires starting in chimneys, walls, on roofs, on the other side of a closed door or on a different floor.
- If the alarm is located outside the bedroom or on a different floor, it may not wake up a sound sleeper.
- The use of alcohol or drugs may also impair one’s ability to hear the smoke alarm. For maximum protection, a smoke alarm should be installed in each sleeping area on every level of a home.
- Although smoke alarms can help save lives by providing an early warning of a fire, they are not a substitute for an insurance policy. Home owners and renters should have adequate insurance to protect their lives and property.

Carbon Monoxide Alarm Features

Carbon Monoxide (CO) Alarm

The Carbon Monoxide (CO) alarm monitors the air for the presence of CO. It will alarm when there are high levels of CO present, and when there are low levels of CO present over a longer period of time. (See Page 22 for alarm times) When a CO condition matches either of these situations, the alarm/voice message warning system will sound, and be accompanied by the flashing red LED light. The carbon monoxide sensor uses an electrochemical technology.

CAUTION: This alarm will only indicate the presence of carbon monoxide gas at the sensor. Carbon monoxide gas may be present in other areas.

Individuals with medical problems may consider using warning devices which provide audible and visual signals for carbon monoxide concentrations under 30 ppm.

Installation Instructions

Step 1

Installation Guide:

IMPORTANT: THIS ALARM MUST BE MOUNTED ON A CEILING OR WALL. IT WAS NOT DESIGNED FOR USE AS A TABLETOP DEVICE! INSTALL ONLY AS DETAILED!

A. Recommended Installation Locations:

Kidde Safety recommends the installation of a Smoke/CO Alarm in the following locations. For maximum protection we suggest an alarm be installed on each level of a multilevel home, including every bedroom, hallways, finished attics and basements. Put alarms at both ends of bedroom, hallway or large room if hallway or room is more than 30ft. (9.1m) long. If you have only one alarm, ensure it is placed in the hallway outside of the main sleeping area, or in the main bedroom. Verify the alarm can be heard in all sleeping areas.

Locate an alarm in every room where someone sleeps with the door closed. The closed door may prevent the alarm from waking the sleeper. Smoke, heat and combustion products rise to the ceiling and spread horizontally. Mounting the alarm on the ceiling in the center of the room places it closest to all points in the room. Ceiling mounting is preferred in ordinary residential construction. When mounting an alarm on the ceiling, locate it at a minimum of 4" (10cm) from the side wall (see Diagram A). If installing the alarm on the wall, use an inside wall with the top edge of the alarm at a minimum of 4" (10cm) and a maximum of 12" (30.5cm) below the ceiling (see Diagram A).

Installation Instructions

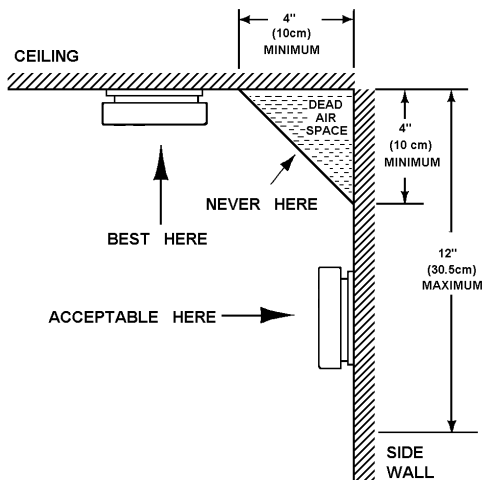


DIAGRAM A

Sloped Ceiling Installation:

The following information is from the National Fire Protection Association and is listed in Fire Code 72. Install Smoke Alarms on sloped, peaked or cathedral ceilings at, or within 3ft (0.9m) of the highest point (measured horizontally). NFPA 72 states "Smoke alarms in rooms with ceiling slopes greater than 1 foot to 8 feet (.3 m-2.4 m) horizontally shall be located on the high side of the room."

NFPA 72 states "A row of alarms shall be spaced and located within 3 ft (0.9 m) of the peak of the ceiling measured horizontally." (See Diagram B)

Installation Instructions

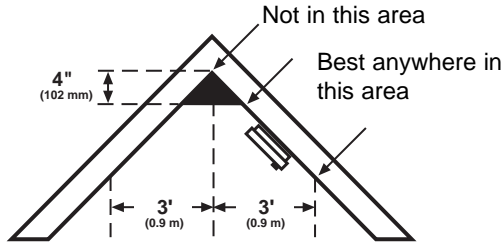


DIAGRAM B

Mobile Homes:

Mobile homes built within the last five to seven years are designed to be energy efficient. Install Smoke/CO alarms as recommended above. (Refer to Recommended Installation Instructions and Diagram A) In mobile homes that are not well insulated, extreme heat or cold can be transferred from the outside to the inside through poorly insulated walls and roof. This may cause a thermal barrier, which can prevent smoke from reaching an alarm mounted on the ceiling. In such mobile homes install your Smoke/CO Alarm on an inside wall with the top edge of the alarm at a minimum of 4 inches (10cm) and a maximum of 12 inches (30.5cm) below the ceiling. (See Diagram A) If you are not sure about the insulation in your mobile home, or if you notice that the outer walls and ceiling are either hot or cold, install your alarm on an inside wall **ONLY!**

Installation Instructions

THIS EQUIPMENT SHOULD BE INSTALLED IN ACCORDANCE WITH THE NATIONAL FIRE PROTECTION ASSOCIATION'S STANDARD 72 (National Fire Protection Association, Batterymarch Park, Quincy, MA 02269).



WARNING - This product is intended for use in ordinary indoor locations of family living units. It is not designed to measure compliance with Occupational Safety and Health Administration (OSHA) commercial or industrial standards.

B. Where Not to Install:

Do not install in garages, kitchens, furnace rooms or bathrooms! INSTALL AT LEAST 5 FEET AWAY FROM ANY FUEL BURNING APPLIANCE.

Do not install within 3 ft (.9m) of the following: The door to a kitchen, or a bathroom that contains a tub or shower, forced air ducts used for heating or cooling, ceiling or whole house ventilating fans, or other high air flow areas. Avoid excessively dusty, dirty or greasy areas. Dust, grease or household chemicals can contaminate the alarm's sensors, causing it to not operate properly.

Place the alarm where drapes or other objects will not block the sensor. Smoke and CO must be able to reach the sensors to accurately detect these conditions. Do not install in peaks of vaulted ceilings, "A" frame ceilings or gabled roofs. Keep out of damp and humid areas.

Installation Instructions

Install at least one (1) foot away from fluorescent lights, electronic noise may cause nuisance alarms. Do not place in direct sunlight and keep out of insect infested areas. Extreme temperatures will effect the sensitivity of the Smoke/CO Alarm. Do not install in areas where the temperature is colder than 40 degrees Fahrenheit (4.4 Celsius) or hotter than 100 degrees Fahrenheit (37.8 Celsius). Do not install in areas where the relative humidity (RH) is above 85%. Place away from doors and windows that open to the outside.

Step 2

Wiring Instructions:

WIRING REQUIREMENTS

- This Smoke/CO Alarm should be installed on a UL Listed or recognized junction box. All connections should be made by a qualified electrician and must conform to article 760 of the U.S. National Electrical Code, NFPA 72 and/or any other codes having jurisdiction in your area.
- The appropriate power source is 120 Volt AC Single Phase supplied from a non-switchable circuit, which is not protected by a ground fault interrupter.
- Smoke alarms are not to be used with detector guards unless the combination (alarm and detector guard) have been evaluated and found suitable for that purpose.
- The alarm should not be operated on power derived from a square wave, or modified square wave, inverter. These power sources produce high peak voltages that will damage the alarm.


Installation Instructions

WIRING INSTRUCTIONS FOR AC QUICK CONNECT HARNESS

CAUTION! TURN OFF THE MAIN POWER TO THE CIRCUIT BEFORE WIRING THE ALARM.

- For alarms that are used as single station, DO NOT CONNECT THE RED WIRE TO ANYTHING. Leave the red wire insulating cap in place to make certain that the red wire cannot contact any metal parts or the electrical box.
- When alarms are interconnected, all interconnected units must be powered from a single circuit.
- A maximum of 24 Kidde Safety devices may be interconnected in a multiple station arrangement. The interconnect system should not exceed the NFPA interconnect limit of 12 smoke alarms and / or 18 alarms total (smoke, CO, Smoke/CO Combination, heat, etc.) This Smoke/CO combination alarm must be counted as a smoke alarm when determining the number of units on an interconnect line. With 18 alarms interconnected, it is still possible to interconnect up to a total of 6 remote signaling devices and /or relay modules. (See Page 16 for details on interconnecting Kidde devices).

FIGURE 1 "INTERCONNECT WIRING DIAGRAM"

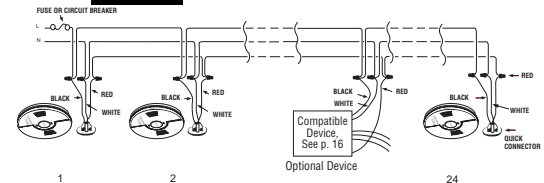

WIRES ON ALARM HARNESS

Black
White
Red

CONNECTED TO

Hot Side of A.C. Line
Neutral Side of A.C. Line
Interconnect Lines (Red Wires) of
Other Units in the Multiple Station
Set up

Installation Instructions

- The maximum wire run distance between the first and last unit in an interconnected system is 1000 feet.
- Figure 1 illustrates interconnection wiring. Improper connection will result in damage to the alarm, failure to operate, or a shock hazard.
- Make certain alarms are wired to a continuous (non-switched) power line. NOTE: Use standard UL Listed household wire (18 gauge or larger as required by local codes) available at all electrical supply stores and most hardware stores.

Installation Instructions

Step 3

Mounting Instructions:

CAUTION: YOUR SMOKE/CO ALARM IS SEALED AND THE COVER IS NOT REMOVABLE!

1. Remove the mounting bracket from the back of the alarm by holding the mounting bracket and twisting the alarm in the direction indicated by the "OFF" arrow on the alarm cover.
2. After selecting the proper location for your Smoke/CO Alarm, as described on Pages 8-10, and wiring the AC QUICK CONNECT harness as described in the WIRING INSTRUCTIONS, attach the mounting bracket to the electrical box. To ensure aesthetic alignment of the alarm with the hallway, or wall, the "A" line on the mounting bracket must be parallel with the hallway when ceiling mounted, or horizontal when wall mounted.
3. Pull the AC QUICK CONNECTOR through the center hole in the mounting bracket and secure the bracket, making sure that the mounting screws are positioned in the small ends of the keyholes before tightening the screws.
4. Plug the AC QUICK CONNECTOR into the back of the alarm (see Figure 2), making sure that the locks on the connector snap into place. Then push the excess wire back into the electrical box through the hole in the center of the mounting bracket.

FIGURE 2

"INSTALLING AC QUICK CONNECT"



Operating Instructions

5. Install the alarm on the mounting bracket and rotate the alarm in the direction of the “ON” arrow on the cover until the alarm ratchets into place (this ratchet-ing function allows for aesthetic alignment). Note: The alarm will mount to the bracket in 4 positions (every 90 degrees).
6. Turn on the AC power. The green AC Power On Indicator should be lit when the alarm is operating from AC power.
7. Two labels are included with your alarm. They have important information on what to do in case of an alarm. Add the phone number of your emergency service provider (fire department or 911) in the space provided. Place one label next to the alarm after it is mounted, and one label near a fresh air source such as a door or window.”
8. For model KN-COSM-IB only: Pull the Battery Pull Tab (yellow tab protruding from unit) completely out of unit. This will automatically connect the battery.

Step 4 Testing the Alarm

CAUTION: Due to the loudness (85 decibels) of the alarm, always stand an arms length away from the unit when testing.

The test/reset button has four purposes. It tests the unit’s electronics, resets the CO alarm, activates the HUSH feature, and activates the Peak Level Memory Feature.

After installation, TEST THE UNIT’S ELECTRONICS by pressing the test/reset button for five seconds. A series of beeps will sound, followed by the message “FIRE! FIRE!” then another two series of beeps and the mes-sage “WARNING! CARBON MONOXIDE!” followed by 4 additional short beeps.

Operating Instructions

The unit needs to be tested weekly! If at anytime it does not perform as described, verify power is connect-ed correctly and that the battery doesn’t need replacing. Clean dust and other buildup off the unit. If it still doesn’t operate properly call the Consumer Hotline at 1-800-880-6788.

Interconnect Feature

Your Combination Smoke/CO Alarm is interconnectable to other multiple station Kidde, Nighthawk and Kidde/Fyrnetics products:

- When compatible smoke alarms and heat alarms are interconnected to your Smoke/CO Alarm, they will only respond to a smoke related event.
- When mixing compatible models with battery backup with models without battery backup, be advised that the models without battery backup will not respond during an AC power failure.
- This unit is only approved to interconnect with other Kidde/Nighthawk products. It is NOT approved to interconnect with any other brand of detection product.
- This alarm is interconnect compatible with the following alarms and accessories:
 - Smoke alarms: 1235, 1275, 1276, 1285, PE120, PI2000, KN-COSM-IB
 - Heat alarm: HD135F
 - CO alarms: KN-COB-IC, KN-COP-IC
 - Relay modules: 120X, SM120X, CO120X
 - Strobe Light: SL1771

See User’s Guides for specific application information.
- For more information about compatible interconnect units and their functionality in an interconnect system, visit our web site at: www.KiddeUS.com.

Operating Instructions

HUSH Control Feature

The HUSH feature has the capability of temporarily desensitizing the smoke alarm circuit for approximately 10 minutes. This feature is to be used only when a known alarm condition, such as smoke from cooking, activates the alarm. You can put your Smoke/CO Alarm in HUSH mode by pushing the test/reset button. If the smoke is not too dense, the alarm will silence immediately, the unit will verbally announce "HUSH MODE ACTIVATED", and the green LED will flash every 2 seconds for approximately 10 minutes. This indicates that the smoke alarm is in a temporarily desensitized condition. Your Smoke/CO Alarm will automatically reset after approximately 10 minutes. When the unit returns to normal operation after being in HUSH mode, it will verbally announce "HUSH MODE CANCELLED", and sound the alarm if smoke is still present. The HUSH feature can be used repeatedly until the air has been cleared of the condition causing the alarm. While the unit is in HUSH mode, pushing the test/reset button on the alarm will also end the HUSH period.

NOTE: DENSE SMOKE WILL OVERRIDE THE HUSH CONTROL FEATURE AND SOUND A CONTINUOUS ALARM.

CAUTION: BEFORE USING THE ALARM HUSH FEATURE, IDENTIFY THE SOURCE OF THE SMOKE AND BE CERTAIN A SAFE CONDITION EXISTS.

Reset Feature

If the the Smoke/CO Alarm is sounding a CO alarm, pressing the test/reset button will silence the alarm. If the CO condition that caused the alert continues, the alarm will reactivate. Reactivation times depend on the amount of CO present. (See Page 22)

Operating Instructions

Peak Level Memory

If the CO sensor has detected a CO level of 100 PPM or higher since last reset, it will be recorded by the Peak Level Memory function. To access the Peak Level Memory press the test/reset button. If a reading of 100 PPM or higher has been recorded, the unit will announce "CARBON MONOXIDE PREVIOUSLY DETECTED." If you've been away from home this feature allows you to check if there was a CO reading of 100, or higher, during your absence. Pushing the test/reset button resets the memory. It's also reset when the power is removed.

LED Indicator Operation

Red LED

Red LED will flash in conjunction with the alarm beep. Therefore, the red LED will flash during a smoke alarm, a CO alarm, a low battery mode chirp and a unit error mode chirp.

Green LED

The green LED will flash as described below under the following conditions:

STANDBY CONDITION (powered by AC and battery backup) - The LED will be constantly on, but will flicker every 30 seconds when a CO reading is taken.

STANDBY CONDITION (for model KN-COSM-IB only) (powered by only battery backup) - The LED will flash every 5 seconds.

ALARM MEMORY CONDITION - The LED will flash every second signifying that the alarm sensed a smoke or CO hazard. It will continue to flash every second until the test/reset button is pressed, thus resetting the alarm.

HUSH MODE CONDITION - The LED will flash every 2 seconds while the alarm is in HUSH mode.

Operating Instructions

"TAMPER RESIST FEATURE"

FIGURE 3A


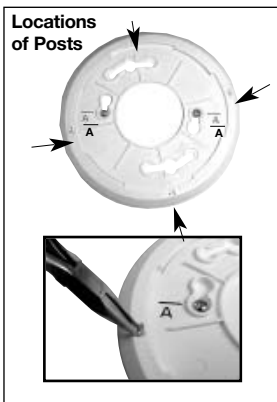


FIGURE 3B

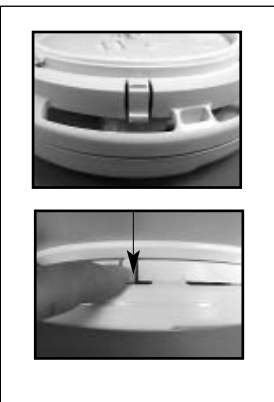

Tamper Resist Feature

To make your smoke/CO alarm somewhat tamper resistant, a tamper resist feature has been provided. Activate the tamper resist feature by breaking off the four posts in the square holes in the trim ring (see Figure 3A). When the posts are broken off, the tamper resist tab on the base is allowed to engage the mounting bracket. Rotate the alarm onto the mounting bracket until you hear the tamper resist tab snap into place, locking the alarm on the mounting bracket. Using the tamper resist feature will deter children and others from removing the alarm from bracket. NOTE: To remove the alarm when the tamper resist tab is engaged, press down on the tamper resist tab, and rotate the alarm off of the bracket (see Figure 3B).

What To Do If The Alarm Sounds

NEVER IGNORE THE SOUND OF THE ALARM!

Determining what type of alarm has sounded is easy with your Nighthawk Combination Smoke/CO Alarm. The voice message warning system will inform you of the type of situation occurring. Refer to the Features section on Pages 4-7 for a detailed description of each alarm pattern.

When the smoke alarm sounds:

Smoke alarms are designed to minimize false alarms. Cigarette smoke will not normally set off the alarm, unless the smoke is blown directly into the alarm. Combustion particles from cooking may set off the alarm if located too close to the cooking area. Large quantities of combustible particles are generated from spills or when broiling. Using the fan on a range hood which vents to the outside (non recirculating type) will also help remove these combustible products from the kitchen.

If the alarm sounds, check for fires first. If a fire is discovered follow these steps. Become thoroughly familiar with these items, and review with all family members!

- Alert small children in the home.
- Leave immediately using one of your planned escape routes (see Page 28). Every second counts, don't stop to get dressed or pick up valuables.
- Before opening inside doors look for smoke seeping in around the edges, and feel with the back of your hand. If the door is hot use your second exit. If you feel it's safe, open the door very slowly and be prepared to close immediately if smoke and heat rush in.
- If the escape route requires you to go through smoke, crawl low under the smoke where the air is clearer.

What To Do If The Alarm Sounds

- Go to your predetermined meeting place. When two people have arrived one should leave to call 911 from a neighbor's home, and the other should stay to perform a head count.
- **Do not reenter under any circumstance until fire officials give the go ahead.**
- There are situations where a smoke alarm may not be effective to protect against fire as stated in the NFPA Standard 72. For instance:
 - a) smoking in bed
 - b) leaving children unsupervised
 - c) cleaning with flammable liquids, such as gasoline

When the carbon monoxide alarm sounds:



WARNING: Actuation of your CO Alarm indicates the presence of Carbon Monoxide (CO) which can KILL YOU.

If alarm signal sounds:

- 1) Operate the test/reset button;
- 2) Call your emergency services (fire dept. or 911);
- 3) Immediately move to fresh air - outdoors or by an open door/window. Do a head count to check that all persons are accounted for. Do not reenter the premises nor move away from the open door/window until the emergency services responders have arrived, the premises have been aired out, and your alarm remains in its normal condition.
- 4) After following steps 1-3, if your alarm reactivates within a 24 hour period, repeat steps 1-3 and call a qualified appliance technician to investigate for sources

Alarm Removal/Battery Replacement

of CO from fuel burning equipment and appliances, and inspect for proper operation of this equipment. If problems are identified during this inspection have the equipment serviced immediately. Note any combustion equipment not inspected by the technician and consult the manufacturer's instructions, or contact the manufacturer's directly, for more information about CO safety and this equipment. Make sure that motor vehicles are not, and have not been, operating in an attached garage or adjacent to the residence.

Never restart the source of a CO problem until it has been fixed. NEVER IGNORE THE ALARM!

The CO sensor meets the alarm response time requirements of UL standard 2034. Standard alarm times are as follows:

At 70 PPM, the unit must alarm within 60-240 minutes.
At 150 PPM, the unit must alarm within 10-50 minutes.
At 400 PPM, the unit must alarm within 4-15 minutes.

This carbon monoxide alarm is designed to detect carbon monoxide gas from ANY source of combustion. It is NOT designed to detect any other gas.

Fire departments, most utility companies and HVAC contractors will perform CO inspections, some may charge for this service. It's advisable to inquire about any applicable fees prior to having the service performed. Kidde Safety will not pay for, or reimburse, the owner or user of this product, for any repair or dispatch calls related to the alarm sounding.

Alarm Removal

IF TAMPER RESIST FEATURE HAS BEEN ACTIVATED, REFER TO TAMPER RESIST FEATURE DESCRIPTION ON PAGE 19 FOR REMOVAL INSTRUCTIONS.

Battery Replacement (For model KN-COSM-IB only)

Remove the alarm from the mounting bracket by rotating the alarm in the direction of the “OFF” arrow on the cover. To disconnect the AC power harness, squeeze the locking arms on the sides of the Quick Connector while pulling the connector away from the bottom of the alarm (see Page 15, Figure 2).

Battery Replacement (For model KN-COSM-IB only)

If any form of battery failure is detected the red LED light will flash and the unit will “chirp” one time, followed by the warning message “LOW BATTERY.” This cycle will occur once every minute, and will continue for at least seven days.

If the red LED light flashes along with a chirp every 30 seconds, and is not followed by the voice message “LOW BATTERY” as described above, your unit has malfunctioned. Call our toll free Consumer Hotline at 1-800-880-6788 for instructions on how to return the unit.

CAUTION: YOUR SMOKE/CO ALARM IS SEALED AND THE COVER IS NOT REMOVABLE!


To replace the battery you must first remove the alarm from the mounting bracket by following the ALARM REMOVAL instructions at the beginning of this section. After the alarm has been removed, you can open the battery door and replace the battery.

Battery installation instructions are provided on the inside of the battery door.

Battery Replacement (For model KN-COSM-IB only)

FIGURE 4

FIGURE 4 “BATTERY REPLACEMENT”

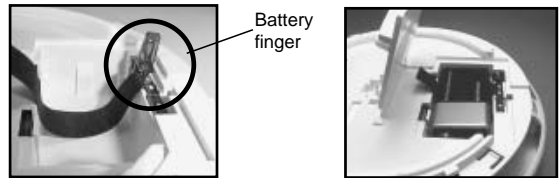

When installing the battery, press the battery reminder finger down into the battery compartment and install the battery (see Figure 4).

CAUTION! IF THE BATTERY REMINDER FINGER IS NOT HELD DOWN IN THE BATTERY COMPARTMENT BY THE BATTERY, THE BATTERY DOOR WILL NOT CLOSE, THE AC QUICK CONNECTOR WILL NOT ATTACH TO THE ALARM, AND THE ALARM WILL NOT ATTACH TO THE MOUNTING BRACKET.

After installing or changing the battery, reinstall your alarm. Test your alarm by using the test/reset button and check that the green LED is on.

Replace batteries with one of the following approved brands: Duracell MN1604, MX1604, Energizer 522, Ultralife U9VL. These batteries can be purchased at your local retailer.

WARNING! Use only the batteries specified. Use of different batteries may have a detrimental effect on the Smoke/CO alarm. A good safety measure is to replace the battery at least once a year, or at the same time you change your clocks for daylight saving time.

General Maintenance

To keep your Smoke/CO Alarm in good working order, please follow these simple steps:

- Verify the unit's alarm and LED lights operation by pushing the test/reset button once a week.
- Remove the unit from mounting bracket and vacuum the alarm cover and vents with a soft brush attachment once a month to remove dust and dirt. REINSTALL IMMEDIATELY AFTER CLEANING AND THEN TEST USING THE TEST/RESET BUTTON!
- Never use detergents or other solvents to clean the unit.
- Avoid spraying air fresheners, hair spray, or other aerosols near the Smoke/CO Alarm.

Do not paint the unit. Paint will seal the vents and interfere with the sensor's ability to detect smoke and CO. Never attempt to disassemble the unit or clean inside. This action will void your warranty.

Move the Smoke/CO Alarm and place in another location prior to performing any of the following:

- Staining or stripping wood floors or furniture
- Painting
- Wall papering
- Using adhesives

Storing the unit in a plastic bag during any of the above projects will protect the sensors from damage. Do not place near a diaper pail.

WARNING: Reinstall the Smoke/CO Alarm as soon as possible to assure continuous protection.

When household cleaning supplies or similar contaminants are used, the area must be well ventilated. The following substances can effect the CO sensor and may cause false readings and damage to the sensor:

Methane, propane, iso-butane, iso-propanol, ethyl acetate, hydrogen sulfide, sulfide dioxides, alcohol based products, paints, thinner, solvents, adhesives, hair spray, after shave, perfume, and some cleaning agents.

Carbon Monoxide Safety Information

General CO Information

Carbon monoxide (CO) is a colorless, odorless, and tasteless poison gas that can be fatal when inhaled. CO inhibits the blood's capacity to carry oxygen.

Possible Sources

CO can be produced when burning any fossil fuel: gasoline, propane, natural gas, oil and wood. It can be produced by any fuel-burning appliance that is malfunctioning, improperly installed, or not ventilated correctly. Possible sources include furnaces, gas ranges/stoves, gas clothes dryers, water heaters, portable fuel burning space heaters, fireplaces, wood-burning stoves and certain swimming pool heaters. Blocked chimneys or flues, back drafting and changes in air pressure, corroded or disconnected vent pipes, and a loose or cracked furnace exchanger can also cause CO. Vehicles and other combustion engines running in an attached garage and using a charcoal/gas grill or hibachi in an enclosed area are all possible sources of CO.

The following conditions can result in transient CO situations: Excessive spillage or reverse venting of fuel-burning appliances caused by outdoor ambient conditions such as: Wind direction and/or velocity, including high gusts of wind, heavy air in the vent pipes (cold/humid air with extended periods between cycles), negative pressure differential resulting from the use of exhaust fans, simultaneous operation of several fuel-burning appliances competing for limited internal air, vent pipe connections vibrating loose from clothes dryers, furnaces, or water heaters, obstructions in, or unconventional, vent pipe designs which can amplify the above situations, extended operation of unvented fuel-burning devices (range, oven, fireplace, etc.), temperature inversions which can trap exhaust gasses near the ground, car idling in an open or closed attached garage, or near a home.

Carbon Monoxide Safety Information

CO Safety Tips

Every year have the heating system, vents, chimney and flue inspected and cleaned by a qualified technician. Always install appliances according to manufacturer's instructions and adhere to local building codes. Most appliances should be installed by professionals and inspected after installation. Regularly examine vents and chimneys for improper connections, visible rust, or stains, and check for cracks in furnace heat exchangers. Verify the color of flame on pilot lights and burners is blue. A yellow or orange flame is a sign that the fuel is not burning completely. Teach all household members what the alarm sounds like and how to respond.


Symptoms of CO Poisoning

Initial carbon monoxide poisoning symptoms are similar to the flu with no fever and can include dizziness, severe headaches, nausea, vomiting and disorientation. Everyone is susceptible but experts agree that unborn babies, pregnant women, senior citizens and people with heart or respiratory problems are especially vulnerable. If symptoms of carbon monoxide poisoning are experienced seek medical attention immediately. CO poisoning can be determined by a carboxyhemoglobin test.

The following symptoms are related to CARBON MONOXIDE POISONING and should be discussed with ALL members of the household:

1. **Mild Exposure:** Slight headache, nausea, vomiting, fatigue (often described as "Flu-like" symptoms).
2. **Medium Exposure:** Severe throbbing headache, drowsiness, confusion, fast heart rate.
3. **Extreme Exposure:** Unconsciousness, convulsions, cardiorespiratory failure, death.

Fire Safety Information

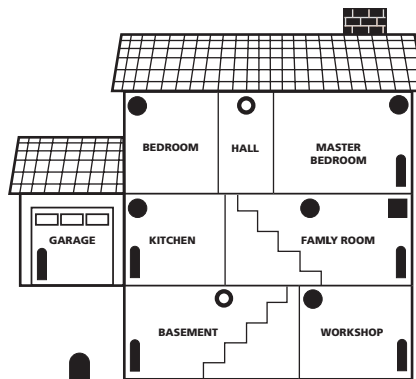

FIRE EXTINGUISHERS

SMOKE ALARMS

CARBON MONOXIDE ALARMS

The above levels of exposure relate to healthy adults. Levels differ for those at high risk. Exposure to high levels of carbon monoxide can be fatal or cause permanent damage and disabilities. Many cases of reported carbon monoxide poisoning indicate that while victims are aware they are not well, they become so disoriented they are unable to save themselves by either exiting the building, or calling for assistance. Also, young children and household pets may be the first effected. Familiarization with the effects of each level is important.

Escape Plan

Familiarize everyone with the sound of the smoke alarm and train them to leave the home when they hear it. Practice a fire drill at least every six months, includ-

Fire Safety Information

ing fire drills at night. Ensure that small children hear the alarm and wake when it sounds. They must wake up in order to execute the escape plan. Practice allows all occupants to test your plan before an emergency. You may not be able to reach your children. It is important they know what to do. Know two ways out of every room (door & window) and identify a meeting place outside the home where everyone will gather once they have exited the residence. When two people have reached the meeting place, one should leave to call 911 while the second person stays to account for additional family members.

Establish a rule that once you're out, you never reenter under any circumstance!

Fire Prevention

Never smoke in bed, or leave cooking food unattended. Teach children never to play with matches or lighters! Train everyone in the home to recognize the alarm pattern, voice message warning and to leave the home using their escape plan when it's heard. Know how to do Stop, Drop and Roll if clothes catch on fire, and how to crawl low under smoke. Install and maintain fire extinguishers on every level of the home and in the kitchen, basement and garage. Know how to use a fire extinguisher prior to an emergency. Second level and higher occupied rooms with windows, should have an escape ladder.

Industry Safety Standards

NFPA (National Fire Protection Association)

For your information, the National Fire Protection Association's Standard 72, reads as follows:

Smoke alarms shall be installed outside of each separate sleeping area in the immediate vicinity of the bedrooms

Industry Safety Standards

and on each additional story of the family living unit including basements and excluding crawl spaces and unfinished attics. In new construction, a smoke alarm shall be installed in each sleeping room.

Smoke Detection - Are More Smoke Alarms Desirable?

The required number of smoke alarms might not provide reliable early warning protection for those areas separated by a door from the areas protected by the required smoke alarms. For this reason, it is recommended that the householder consider the use of additional smoke alarms for those areas for increased protection. The additional areas include the basement, bedrooms, dining room, furnace room, utility room, and hallways not protected by the required smoke alarms. The installation of smoke alarms in kitchens, attics (finished or unfinished), or garages is not normally recommended, as these locations occasionally experience conditions that can result in improper operation.

California State Fire Marshall

Early warning fire detection is best achieved by the installation of fire detection equipment in all rooms and areas of the household as follows: A smoke alarm installed in each separate sleeping area (in the vicinity, but outside the bedrooms), heat or smoke detectors in the living rooms, dining rooms, bedrooms, kitchens, hallways, attics, furnace rooms, closets, utility and storage rooms, basements and attached garages.

Consumer Product Safety Commission

The Consumer Product Safety Commission (CPSC) recommends the use of at least one CO Alarm per household, located near the sleeping area.

Warranty and Service Information

NRC

Ionization type smoke alarms use a very small amount of a radioactive element in the sensing chamber to enable detection of visible and invisible combustion products. The radioactive element is safely contained in the chamber and requires no adjustments or maintenance. This smoke alarm meets or exceeds all government standards. It is manufactured and distributed under license from the U.S. Nuclear Regulatory Commission.

Warranty and Service Information

Limited Warranty

FIVE YEAR LIMITED WARRANTY

KIDDE warrants that the enclosed alarm (but not the battery) will be free from defects in material and workmanship or design under normal use and service for a period of five years from the date of purchase. The obligation of KIDDE under this warranty is limited to repairing or replacing the alarm or any part which we find to be defective in material, workmanship or design, free of charge, upon sending the alarm with proof of date of purchase, postage and return postage prepaid, to Warranty Service Department, KIDDE, 1394 South Third Street, Mebane, NC 27302.

This warranty shall not apply to the alarm if it has been damaged, modified, abused or altered after the date of purchase or if it fails to operate due to improper maintenance or inadequate AC or DC power. Any implied warranties arising out of this sale, including but not limited to the implied warranties of description, merchantability and fitness for a particular purpose, are limited in duration to the above warranty period. In no event shall the Manufacturer be liable for loss of use of this product or for any indirect, special, incidental or consequential damages, or costs, or expenses incurred by the consumer or any other user of this product, whether due to a breach

Warranty and Service Information

of contract, negligence, strict liability in tort or otherwise. The Manufacturer shall have no liability for any personal injury, property damage or any special, incidental, contingent or consequential damage of any kind resulting from gas leakage, fire or explosion. Since some states do not allow limitations of the duration of an implied warranty or do not allow the exclusion or limitation of incidental or consequential damages, the above limitations or exclusions may not apply to you. While this warranty gives you specific legal rights, you may also have other rights which vary from state to state.

Also, KIDDE makes no warranty, express or implied, written or oral, including that of merchantability or fitness for any particular purpose, with respect to the battery.

The above warranty may not be altered except in writing signed by both parties hereto. Your Nighthawk Combination Smoke & CO Alarm is not a substitute for property, fire, disability, life or other insurance of any kind. Appropriate insurance coverage is your responsibility. Consult your insurance agent. Removal of the front cover will void the warranty.

This alarm is not intended to alert hearing impaired individuals.

During the specified warranty period Kidde Products will repair or replace, at its discretion any defective Nighthawk Combination Smoke & CO Alarms that are returned in a postage paid package to the following address: Kidde Products Attn: Warranty Returns, 1394 S. Third Street, Mebane, NC 27302, USA. Please include your name, address and phone number along with a brief description of what is wrong with the unit. For

Installation Instructions

further assistance please call our toll free Consumer Hotline at 1-800-880-6788. Damage from neglect, abuse or failure to adhere to any of the enclosed instructions will result in termination of the warranty, and the unit will not be replaced or repaired.

Product Registration

This manual and the products described herein are copyrighted, with all rights reserved. Under these copyright laws, no part of this manual may be copied for use without the written consent of Kidde. If you require further information please contact our Consumer Hotline at 1-800-880-6788 or write us at: Kidde Products, 1394 South Third Street, Mebane, NC 27302. Our internet address is www.KiddeUS.com.



1394 South Third Street, Mebane, NC 27302

Consumer Hotline: 1-800-880-6788

www.KiddeUS.com

Custom Assembled in China with U.S. and Foreign Components.
Patents Pending